
Directional Antenna Mounting Instructions

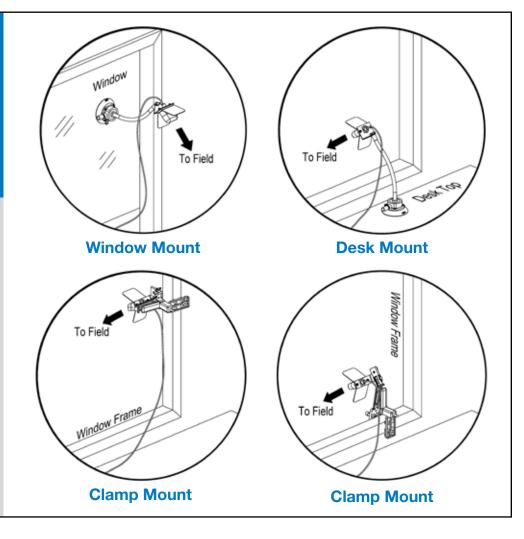





Directional Antenna Mounting Instructions




© 2013 CoachComm, LLC. All Rights Reserved PI_DirAntennalnst

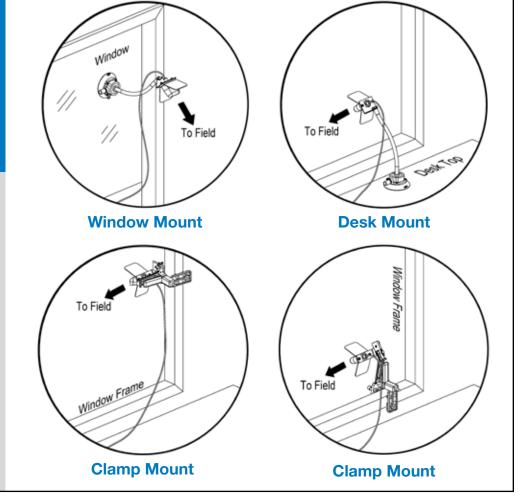

ITEM	PART NO.	DESCRIPTION	QTY.
1	BDG-043R	GAFFER GRIP ADJUSTABLE	1
2	PC-MET-ANTB-02	ANTENNA BRACKET A	1
3	PC-MET-ANTBRKB	ANTENNA BRACKET B	1
4	PC-ANT-EXTDIR	EXTERNAL DIRECTIONAL ANTENNA	1
5	00001421	SCREW, THUMB #10-24 X 1/2"	2
6	00002341	SUCTION CUP MT W/1/4-20 STUD	1
7	00002342	GDDSENECK, 16" W/1/4-20 FERRULE	1
8	00001716	SCREW, THUMB 1/4-20 X 1/2"	1
9	00002343	BRACKET, ANTENNA TO GODSENECK	1
10	PC-ANTCABLE-10	CABLE, RPTNC MALE-N MALE, 10 FT.	1

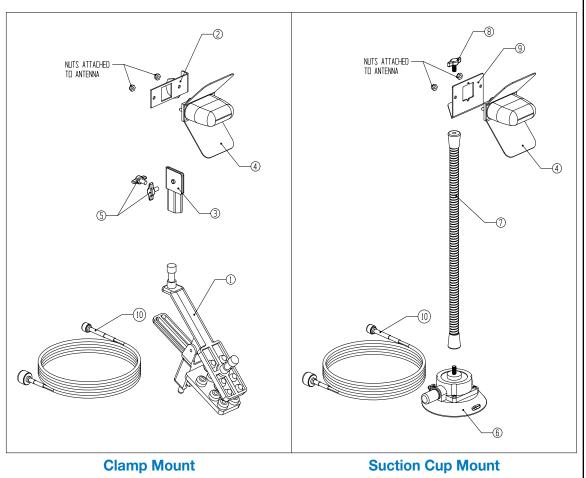

ITEM	PART NO.	DESCRIPTION	QTY.
1	BDG-043R	GAFFER GRIP ADJUSTABLE	1
2	PC-MET-ANTB-02	ANTENNA BRACKET A	1
3	PC-MET-ANTBRKB	ANTENNA BRACKET B	1
4	PC-ANT-EXTDIR	EXTERNAL DIRECTIONAL ANTENNA	1
5	00001421	SCREW, THUMB #10-24 X 1/2"	2
6	00002341	SUCTION CUP MT W/1/4-20 STUD	1
7	00002342	GDDSENECK, 16" W/1/4-20 FERRULE	1
8	00001716	SCREW, THUMB 1/4-20 X 1/2"	1
9	00002343	BRACKET, ANTENNA TO GODSENECK	1
10	PC-ANTCABLE-10	CABLE, RPTNC MALE-N MALE, 10 FT.	1

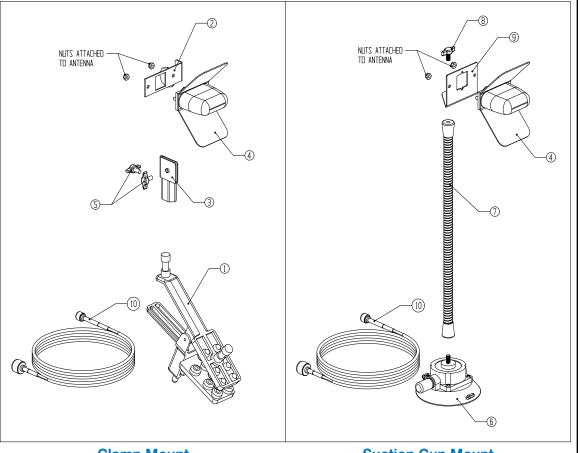

Clamp Mount

Suction Cup Mount